


IPTV BIG BUTTON REMOTE

Set up - Instructions

Getting Started

1. Remove battery cover.
2. Insert 2 AA batteries.
3. Match the + and – marks.
4. Replace battery cover.

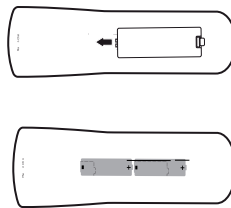

Note

- Make sure TV is ON before starting remote control setup.
- The LED will blink 5 times with each key-press when batteries need replacement.

Setup Method A:

1. Press and hold SETUP until LED blinks twice.




2. Press the TV POWER key.



3. Press and hold down the DIGIT key for your TV brand.

- 1- Insignia/Dynex
- 2- LG/Zenith
- 3 - Mitsubishi
- 4 - Panasonic
- 5 - Phillips/Magnavox
- 6 - Samsung
- 7 - Sharp
- 8 - Sony
- 9 - Toshiba
- 0 - Vizio

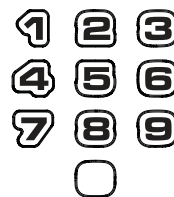

4. Let go of the key when complete.
 - 2 Blinks = Success
 - 1 Long Blink = Failure






Note

- If your brand does not appear on popular TV brand chart, try either Method B to setup the remote to control your TV.

IPTV BIG BUTTON REMOTE

Set up - Instructions

Setup Method B:

1. Press and hold SETUP until LED blinks twice. 
2. Press the TV POWER key. 
3. Press and hold down the OK/SELECT. 
4. Let go of the OK/SELECT key when the TV turns off.



FAQ's

Problem: LED does not blink when a key is pressed.
Solution: Replace batteries.

Problem: TV does not respond when TV POWER or VOLUME keys are pressed.
Solution: Program remote control for your TV brand using instructions in Setup Method A, or B.



IPTV BIG BUTTON REMOTE

Remote Control Guide

